



# HAND OPERATED SIPHON PUMP

## OPERATING INSTRUCTIONS

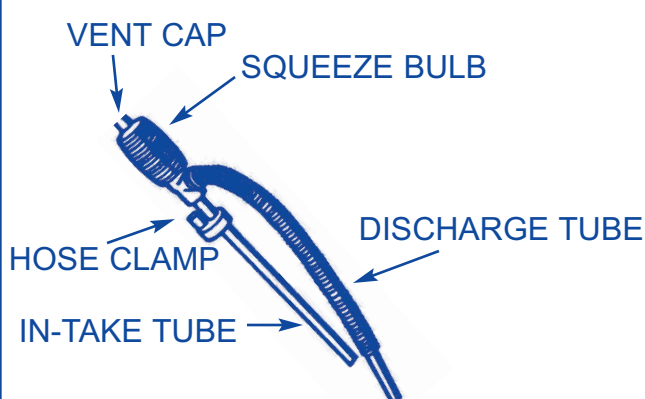

1. INSERT INTAKE (NON-FLEXIBLE) TUBE INTO THE SENDING CONTAINER.
2. INSERT DISCHARGE (FLEXIBLE) TUBE INTO THE RECEIVING CONTAINER OR FUEL TANK (KEROSENE HEATER)
3. TIGHTEN THE VENT CAP BY TURNING CLOCKWISE TO CLOSE VENT.

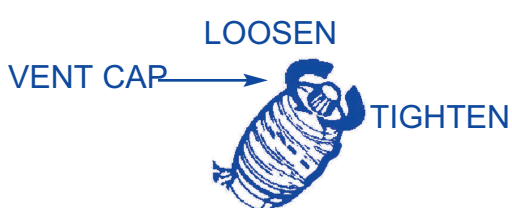

4. SQUEEZE LARGE BULB A FEW TIMES TO START SIPHON ACTION. (AUTOMATIC SIPHON ACTION WILL CONTINUE AS LONG AS FLUID LEVEL IN SENDING CONTAINER IS HIGHER THAN THE LEVEL IN THE CONTAINER THAT FLUID IS BEING TRANSFERRED INTO.
5. BEFORE RECEIVING CONTAINER IS COMPLETELY FULL; STOP FLUID FLOW BY TURNING VENT CAP COUNTER CLOCKWISE. GENTLY LIFT DISCHARGE HOSE SLIGHTLY TO ALLOW ANY REMAINING FUEL TO DRAIN.
6. REMOVE INTAKE HOSE FROM SENDING CONTAINER. CONNECT DISCHARGE HOSE TO HOSE CLAMP TO PREVENT DRIPPING.
7. CLEAN UP ANY SPILLED FLUIDS AND DISPOSE OF CLEANING MATERIALS OUTSIDE THE LIVING AREA.
8. STORE SIPHON PUMP OUTDOORS.

## CAUTION

1. NOT FOR USE WITH CORROSIVE CHEMICALS.
2. WHEN USING WITH A KEROSENE HEATER -
  - \* ALWAYS TURN HEATER OFF AND ALLOW TO COOL BEFORE REFUELING.
  - \* ALWAYS FUEL HEATER OUTDOORS AND CLEAN UP ANY SPILLS.
  - \* ACCEPTABLE FOR USE WITH NON-FLAMMABLE LIQUIDS SUCH AS KEROSENE, SOAPS, ETC.
3. **DO NOT** LEAVE UNATTENDED DURING USE.