

# IMPORTANT INSTRUCTIONS

## PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS


When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1) Read all instructions before using this heater.
- 2) Heater is hot when in use. To avoid burns do not let bare skin touch hot surfaces. Use handle to move heater. Keep combustible materials such as furniture, papers, clothes, and curtains at least 3 feet from the front of the heater and keep them away from the sides and rear.
- 3) Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- 4) Always unplug heater when not in use.
- 5) Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
- 6) Do not use outdoors.
- 7) This heater is not intended for use in wet or very humid locations. Never locate heater where it may fall into water.
- 8) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- 9) To disconnect heater, turn controls to off, then remove plug from outlet.
- 10) Connect to properly grounded outlets only.
- 11) Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 12) To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces or unstable surfaces where the heater may upset or where openings may become blocked.
- 13) A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 14) Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 15) Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or power strip (power tap). **DO NOT CUT OFF PLUG AND WIRE DIRECTLY.**
- 16) Risk of fire. Do not use as a residential or household heater.

# “SAVE THESE INSTRUCTIONS” PLEASE READ BEFORE OPERATING

## PRE-OPERATING INSTRUCTIONS

1. Carefully remove your heater from box. (Please SAVE the Box for off season storage.)
2. Attach the handle using knobs provided.

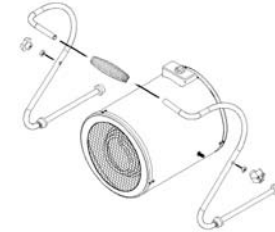

3. Make sure the heater is switched OFF (FULL counter-clockwise position) before plugging the heater into the outlet. Connect to properly grounded outlets only. Note: The power cord has a NEMA #6-20P plug that will only fit in the outlet one way. If it does not fit contact your electrician to replace your outlet.
4. Place heater only on a firm level surface, free from obstructions and at least 3 ft. away from any wall or other objects such as curtains, plants, etc.
5. Avoid overloading your circuit by not using other high wattage appliances in the same outlet.

## HOW TO USE YOUR HEATER

1. Completely uncoil the cord and plug heater directly into a 240 Volt grounded AC wall outlet. Be sure the plug fits tightly. A loose fit will cause overheating and damage the plug. Plug and cord may feel warm during normal usage. **DO NOT USE EXTENSION CORDS. DO NOT CUT OFF PLUG AND WIRE DIRECTLY.**
2. Thermostat: Turn to highest setting until room is comfortable. Then slowly rotate the knob counter clockwise (left) until the heater cycles OFF. At this SET POINT the heater will cycle On and Off to maintain this comfort level.
3. It is necessary to allow the heater to cool for 10 minutes before restarting.

## CAUTION

Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause FIRE, ELECTRIC SHOCK or injury to persons.

## IMPORTANT SAFETY FEATURES

- This heater is equipped with an **AUTOMATIC OVERHEAT SAFETY DEVICE** that will turn off the power to the **HEATING ELEMENT** should the internal temperature of the heater exceed normal levels. If this should happen the heating element will turn off. Should this condition occur, immediately remove any obstructions and set the heater on a level surface. When the temperature returns to normal levels power to the heating element will be restored and the heater should function normally.
- This heater is for use on 240 volts. The cord has a plug of 6-20P as shown on the front page. No adapter is available for this blade configuration, and none should be used. The type outlet is a 240 volt grounding outlet. When properly installed, it provides a ground connection through the cord to the heater to protect the operator from electric shock.

## TROUBLE SHOOTING

If your heater fails to operate, please do the following:

- Review these instructions to insure you understand the basic operations and features of your heater. (Example: Overheat Protection)
- Check your circuit breaker or fuse for proper operation.
- Check for obstructions. Unplug the heater for 30 minutes, clear any obstructions and restart the heater.
- Do NOT expect the heating coils to glow. A tint of orange may be noticeable in places on the element away from the main air flow.

## CLEANING AND STORAGE



Dust, dirt, pet hair, etc can all diminish your heaters performance and can lead to unwanted odors. For best performance clean your heater frequently, at least once per season. **ALWAYS TURN OFF AND UNPLUG THE HEATER BEFORE CLEANING.**

- Turn Heater OFF, unplug it and wait for the heater to become cool.
  - Use a dry cloth to clean only external surfaces of the heater.
  - A vacuum with soft brush may used to clean louvered areas.
  - Wrap and tie the cord to protect it from damage.
  - Repack the heater in its original carton and store it in dry place.
- NEVER** attempt to open or service the heater yourself. Doing so may cause damage or personal injury. (See Warranty Card for more information)

## SPECIFICATIONS

Model NO.	EUH1240 (All specifications +/- 10% tolerance)
Voltage	240V
Frequency	60Hz
Output Power (Watts)	4000W
Electric Current (Amps)	20A
Dimensions ( W x D x H)	16" x 14" x 16"
Net Weight	16.5 lbs.
BTU's per/Hour	13,650 High

# FAN FORCED HEATER MODEL EUH1240

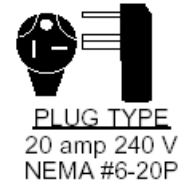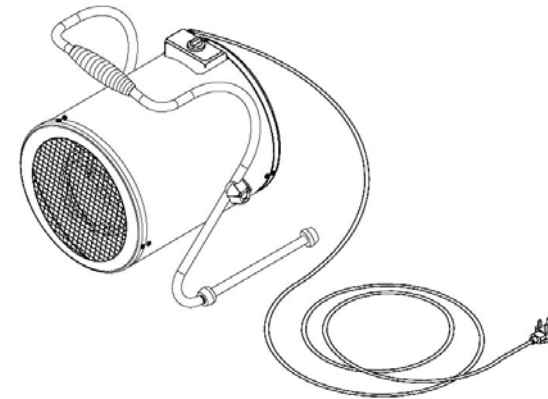

## FEATURES:

- 4000 Watt Heat Output
- Thermostat Heat Control
- Heat Circulating Fan
- Carry Handle and Stand
- Permanently Lubricated Motor

Comfort Home Products Inc. 12256 William Penn Hwy., Suite A  
Huntingdon, PA 16652 Tel: (814) 643-6957

Made in China

