# **PELONIS**

# **OWNER'S MANUAL**



# FAN FORCED HEATER

Model HF-0060



PLEASE READ AND SAVE THESE INSTRUCTIONS

# INSTRUCTIONS FOR USE AND CARE

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS When using electrical appliances, basic precautions should always be followed to

reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1. Read all instructions before using heater.
- 2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surface. If provided, always use handles when moving this heater. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
- **3.** Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- 4. Always unplug the heater when not in use.
- 5. Do not operate the heater with a damaged cord or plug, if the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- **6.** Do not use the heater outdoors.
- 7. This heater is not intended for use in bathroom, laundry areas and similar moist indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- **8.** Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic areas where it can be tripped over.
- 9. CAUTION: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature. To do so could result in an electric shock hazard.
- **10.** This heater draws 10 amps during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
- 11. CAUTION: It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet (receptacle) and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
- 12. To disconnect the heater, first turn controls to the **OFF(\omega)** position, then remove plug from outlet. Never pull by the cord.
- **13.** Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- **14.** To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surface, like a bed, where openings may become blocked.
- **15.** A heater has hot and arcing or sparking parts inside. Do not use it in the areas where gasoline, paint, or flammable liquids are used or stored.
- **16.** Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

- 17. CAUTION: Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No.14 AWG minimum size and rated not less than 1875 watts.
- **18.** The output of this heater may vary and its temperature may become intense enough to burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.

# SAVE THESE IMPORTANT INSTRUCTIONS FOR EASY REFERENCE.

# **ASSEMBLY**

This heater is pre-assembled in factory.

## **ELECTRICAL RATINGS**

This product is rated 10 amps (1200W) at 120V, 60 Hz.

# FEATURES



- A Power Indicator Light
- **B** Power and Setting Control

# **OPERATION**

- Place the heater on a firm, level surface free from obstructions, and at least 3 ft. (0.9m) away from any wall or combustible material.
- With the Power and Setting Control (B) in the OFF( ) position, plug the heater into a grounded 120V outlet. Always operate the heater in the upright position.
- To use the fan function only and no heat needed, Please push the Power and setting control switch to FAN( position, the fan inside will work and Power Indicator Light (A) will illuminate.
- To turn the heater on, please push the Power and Setting Control (B) to HEAT( ≤) position, the fan and heater inside will both work and Power Indicator Light (A) will illuminate

# RESET INSTRUCTIONS

• This heater is equipped with an internal High Limit Switch which causes the unit to stop operating in the event the internal temperature exceeds normal operating temperatures.

#### IF THE UNIT SHUTS DOWN

- 1) TURN THE UNIT OFF
- 2) UNPLUG UNIT AND WAIT 10 MINUTES
- 3) PLUG IN AND TURN ON

## TROUBLESHOOTING

If your heater fails to operate, please follow these instructions:

- Ensure that your circuit breaker or fuse is working properly.
- Be sure the heater is plugged in and that the electrical outlet is working properly.
- Check for any obstruction. If you find any obstruction, turn the heater off. Unplug the heater and wait a few minutes for it to cool down. Carefully remove the obstruction. Plug the heater in and turn it on again by referring to the

#### **OPERATING INSTRUCTIONS**

NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR HEATER, PLEASE SEE THE WARRANTY INFORMATION FOR INSTRUCTIONS. PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE HEATER YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.

# **CLEANING AND STORAGE**

We recommend that the heater be cleaned at least once a month and before off-season storage.

- Turn the heater off and unplug it. Allow it to cool down.
- Use a dry cloth to clean the external surfaces of the heater.

# DO NOT USE WATER, WAX, POLISH OR ANY CHEMICAL SOLUTION.

- Clean your heater using the above-mentioned steps, then pack the heater in its original container and store it in a cool dry place.
- This heater does not disassemble.
- The motor is factory lubricated for life, and will require no further lubrication.

### **SPECIFICATIONS**

Model No.: HF-0060 Voltage: 120V, 60Hz

Current: Maximum 10 Amps Power: Maximum 1200 Watts

Tolerances on all specifications: Not exceeded than 105%

# **SERVICE & SUPPORT**

In the event of a warranty claim or if service is required for this heater, please contact us at the following:

Tel: 866-876-4332

Email us at: service@pelonis.com

For guestions or comments, please write to:

PELONIS CUSTOMER SERVICE 1937 North Great Southwest Parkway Grand Prairie, TX 75050, USA

For your records, staple your sales receipt to this manual and record the following:
DATE OF PURCHASE:
PLACE OF PURCHASE:
SERIAL NUMBER:

# (STAPLE SALES RECEIPT HERE)

NOTE: PROOF OF PURCHASE IS REQUIRED FOR ALL WARRANTY CLAIMS

THANK YOU FOR PURCHASING THIS ESSENTIAL NEEDS PRODUCT!

# **ONE (1) YEAR LIMITED WARRANTY**

- Please read all instructions before attempting to use this product.
- Please return the Warranty Registration card within fifteen (15) days from the date of purchasing this product.

PELONIS warrants as limited herein to the original purchaser of retail that each new Pelonis Fan Forced Heater, shall be free of defects in material and workmanship for a period of one (1) year from the date of original purchase. This one (1) year warranty is limited to the heating elements, motor, and electric control circuit board.

In the event of malfunctions or failure of your Pelonis Fan Forced Heater, simply deliver or send the heater, postage prepaid along with PROOF OF PURCHASE, within the warranty period of one (1) year, to PELONIS. PELONIS reserves the right to inspect the claimed defective part or parts to determine if the defect or malfunction complaint is covered by this warranty. PELONIS shall, within sixty (60) days after receipt of the product, at its option, repair and/or replace the defective part or parts free of charge. This warranty shall only cover defects arising from normal usage. PELONIS assumes no responsibility whatsoever if the Fan Forced Heater should fail during the warranty period by reason of:

- Misuse, negligence, physical damage or accidents.
- Lack of maintenance (see instructions for proper maintenance).
- Repair by any unauthorized party during the warranty period.
- Damage caused by connection to an improper input voltage (see specification label on your heater).

PELONIS makes no further warranties or representations, express or implied except those contained herein. No representative or dealer is authorized to assume any other liability regarding the Fan Forced Heater. The duration of the implied warranty granted under State law, including warranties of merchantability and fitness for particular purpose are limited in duration should the duration of the express warranty grant it hereunder. PELONIS shall in no event be liable for direct, indirect, special or consequential damages.

Some states do not allow limitations on how long an implied warranty lasts, and/or the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.