PELONIS

OWNER'S MANUAL



Utility Fan Heater

Model HT-0605



IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:


- 1. Read all instructions before using this heater.
- 2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
- 3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- 4. Always unplug heater when not in use.
- 5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater or return heater to authorized service facility for examination, eletrical or mechanical adjustment, or repair.
- 6. Do not use outdoors.
- 7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into bathtub or other water container.
- 8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- 9. To disconnect heater, first turn controls to off, then remove plug from outlet.
- 10.Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 11.To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 12.A heater has hot and arcing or sparking parts inside.Do not use it in the areas where gasoline,paint,or flammable liquids are used or stored.
- 13. Use this heater only as described in this manual. Any other use not recommended by the manufacture may cause fire, electric shock, or injury to persons.
- 14.CAUTION:Alwys plug heaters directly into a wall outlet/receptacle.Never use with an extension cord or relocatable power tap (out/power strip).
- 15. This heater draws 12.5 amps during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
- 16. It is normal for the plug to feel warm to the touch, However, a loose fit between the AC outlet(receptacle) and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
- 17. The output of this heater may vary and its temperature may become intense enough to burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.
- 18.Don't leave the heater on unattended.

19. "SAVE THESE INSTRUCTIONS"

OPERATION INSTRUCTIONS

IMPORTANT!

Your heater is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your outlet. DO NOT defeat the safety purpose of the polarized plug.

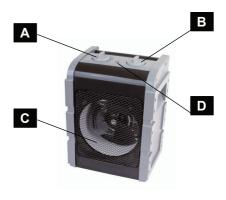

Control Panel Functions A Thermostat B Power switch D Power Indicator Light O ON/OFF FAN ONLY LOW HEAT OUTPUT (900 W) HIGH HEAT OUTPUT (1500 W) THERMOSTAT POWER & SETTING

- Heat Setting Control: Set the power and setting control switch to HIGH for fast warm-up of a room. Once the room is comfortable, slowly rotate the thermostat counterclockwise until the heater shurs off. The thermostat will now maintain the temperature by cycling the heater on and off. Once the room is comfortable, select a lower power setting to reduce electrical consumption and to prevent the room form becoming too warm. During particularly cold weather, the LOW power setting may be insufficient to satisfy the thermostat. Select a higher setting for these periods.
- Fan Only Setting: To operate fan only setting, turn thermostat to MAX and set the Power & Setting Control to FAN ONLY setting.

• Pilot Light: This utility heater is equipped with a pilot light, which glows whenever the heater is plugged in and turned on. it will continue to glow even if the thermostat has cycled the heating elements off. This feature is to prevent you from being unaware that the heater is operating and maintaining the temperature of the room. When you do not wish the heater to control the room temperature, turn the control switch to OFF and remove the plug from the electrical outlet.

SAFETY FEATURES

Tip Over Switch: As a safety measure, the unit will shut off in the event of it being knocked over. Should this, occur, simply turn the heater off and stand it back up to a regular upright position, then switch it back on.

Thermal Fuse: When the unit reaches extremely high temperatures, the heater's fuse will shut off permanently. Should this occur, bring the heater to a certified electrician for examination.

Overheat Protection: This heater is equipped with thermal cut-off, which temporarily shuts off the heater when it reaches high temperatures. Once this happens, turn the heater off and unplug. Allow it to cool for 5-10 minutes. Inspect unit and check to make sure it is not covered with objects. After heater has cooled down,turn it back on to resume normal operation.

Safety Grille: The heater is equipped with a safety grille to protect the heater element This part of the heater can get extremely hot. Do not block this grille as it could cause fire.

ADDITIONAL FEATURE

This heater has additional features:

• Convenient Carry Handle – allows for easy transport from room to room.

TROUBLESHOOTING

If your heater fails to perate, please follow these instructions:

- Ensure that your circuit breaker or fuse is working properly.
- Be sure the heater is plugged in and that the electrical outlet is working properly.
- Check for any obstruction. If you find any obstruction, turn the heater "OFF".
 Unplug the heater and wait a few minutes for it to cool down. Carefully remove the obstruction. Plug the heater in and turn it on again by referring to the OPERATING INSTRUCTIONS.

CLEANING AND STORAGE

It is recommended that the heater be cleaned at least one time during the operating season in order to provide the optimum level of performance. **ALWAYS TURN THE POWER SWITCH OFF AND UNPLUG THE HEATER BEFORE CLEANING**. Be sure to save the box for off-season storage.

- Turn the heater "OFF",unplug it and wait for the heater to cool down.
- Use a dry cloth to clean only external surfaces of the heater.
- Do not use any cleaning agents or detergents.
- Never immerse the heater in water.
- Pack the heater in the original carton and store it in a cool and dry place.

SPECIFICATIONS

Model No: HT-0605 Voltage: 120V,60Hz

Current: Maximum contimuous draw: 12.5Amps.

Output: 5200 BTUs

Power: LOW=900 Watts, HIGH=1500 Watts

Tolerances on all specifications: Approximately +5%,-10%

SERVICE & SUPPORT

In the event of a warranty claim or if service is required for this heater, please contact us at the following:

Tel:866-876-4332

Email us at: Service@Pelonis.com

For questions or comments, please write to:

Midea USA 20N Martingale Road Suite 160 Schaumburg,IL.60173

For your records, staple y	our sales	receipt to	this manu	ual and reco	d the following
DATE OF PURCHASE:					

PLACE OF PURCHASE:

(STAPLE SALES RECEIPT HERE)

NOTE: PROOF OF PURCHASE IS REQUIRED FOR ALL WARRANTY CLAIMS

Printed in China

ONE(1) YEAR LIMITED WARRANTY

- Please read all instructions before attempting to use this product.
- Please return the Warranty Registration card within fifteen (15) days from the date of purchasing this product.

PELONIS warrants as limited herein to hte original purchaser of retail that each new Pelonis heater, shall be free of defects in material and workmanship for a period of one (1) year from the date of original purchase. This one (1) year warranty is limited to the heating elements, motor, and electric control circuit board.

In the event of malfunctions or failure of your Pelonis heater, simply deliver or send the heater, postage prepaid along with PROOF OF PURCHASE, within the warranty period of one (1) year, to PELONIS. PELONIS reserves the right to inspect the claimed defective part or parts to determine if the defect or malfunction somplaint is covered by this warranty. PELONIS shall, within sixty (60) days after receipt of the product, at its option, repair and/or replace the defective part or parts free of charge. This warranty shall only cover defects arising from normal usage. PELONIS assumes no responsibility whatsoever if the heater should fail during the warranty period by reason of.

- Misuse,negligence,physical damage or accidents.
- Lack of maintenance (see instructions for proper maintenance).
- Repair by any unauthorized party during the warranty period.
- Damage caused by connection to an improper input voltage (see specification label on your heater).

PELONIS makes no further warranties or representations, express or implied except those contained herein. No representative or dealer is authorized to assume any other liability regarding the heater. The duration of the implied warranty granted under State law, including warranties of merchantability and fitness for particular purpose are limited in duration should the duration of the express warranty grant it hereunder. PELONIS shall in no event be liable for direct, indirect, special or consequential damages.

Some states do not allow limitations on how long an implied warranty lasts, and/or the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.