


Blower Instructions

Comfort Glow®


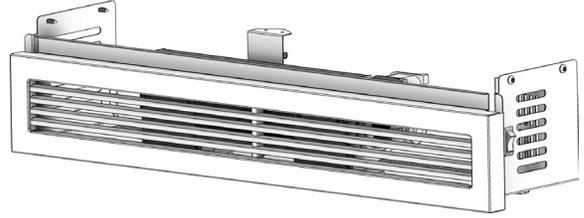


Model Number: **28-7125, 28-7126, 28-7127**


854272

When positioning the blower, ensure that the blower flange rests securely on the stove flange.

Use the provided 4 screws to secure the blower to the unit.

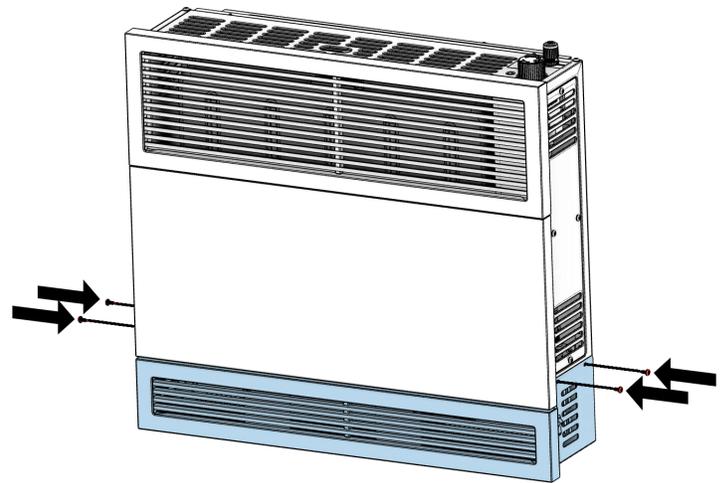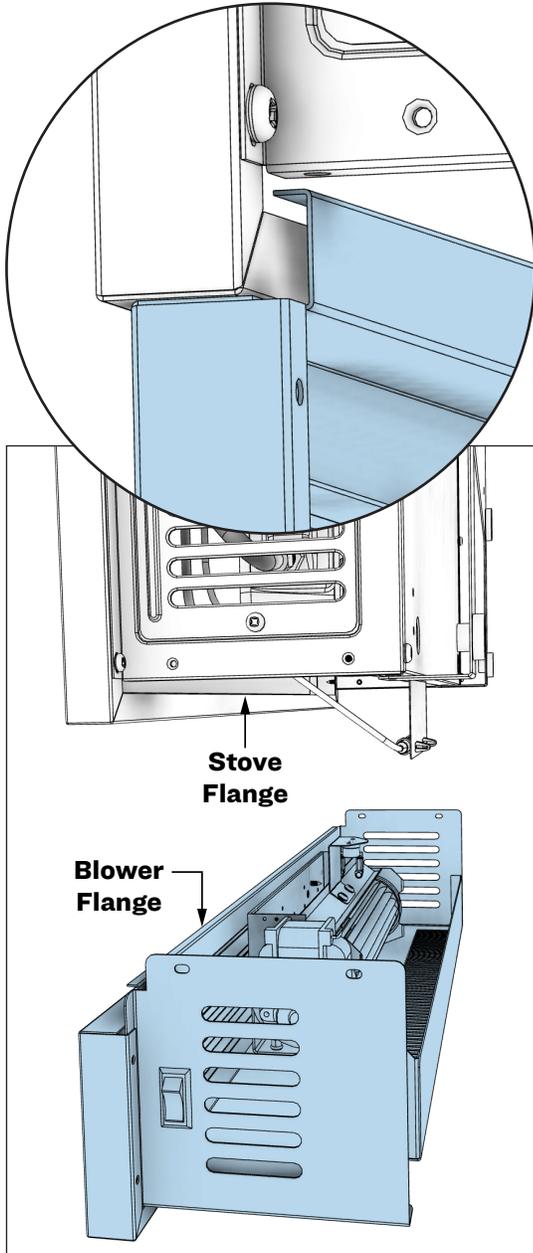


The rocker switch operates in a 3-way configuration: Auto, Off, and On. In the Auto position, the blower will automatically cycle on and off in response to temperature changes. When set to the On position, the blower will run continuously until it is manually turned off.

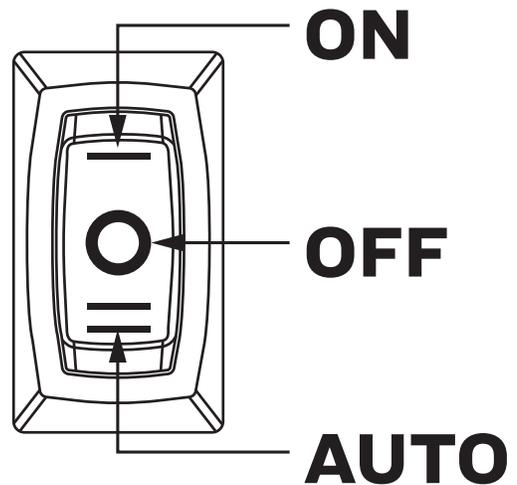

DVB Instructions Pour Le Ventilateur



Comfort Glow®

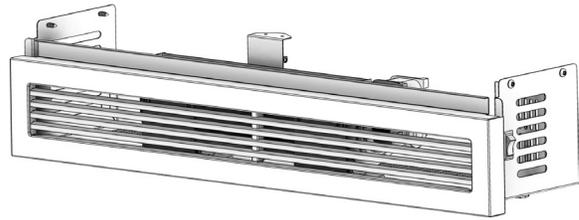

Numéro de modèle: **28-7125, 28-7126, 28-7127**

Lors du positionnement du ventilateur, assurez-vous que la bride du ventilateur repose solidement sur la bride du poêle.

Utilisez les 4 vis fournies pour fixer le ventilateur à l'appareil.

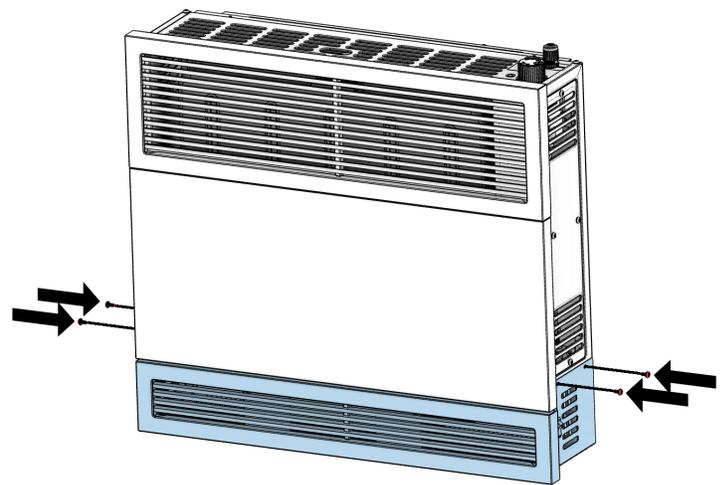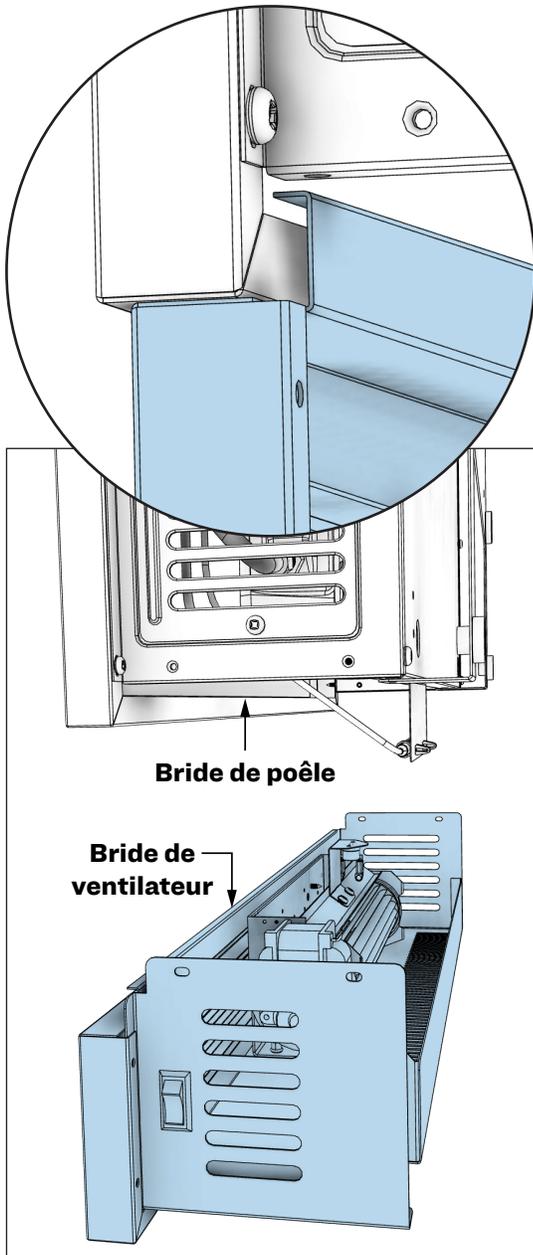

L'interrupteur à bascule fonctionne dans une configuration à 3 voies : Auto, Off et On. En position Auto, le ventilateur s'allume et s'éteint automatiquement en réponse aux changements de température. Lorsqu'il est réglé sur la position On, le ventilateur fonctionne en continu jusqu'à ce qu'il soit éteint manuellement.

